

RIGOL
Innovation or nothing



DG800 Series Function/Arbitrary Waveform Generator

- Unique SiFi II (Signal Fidelity II) technology: generate the arbitrary waveforms point by point; recover the signal without distortion; sample rate accurate and adjustable; jitter of all the output waveforms (including Sine, Pulse, etc.) as low as 200 ps
- 2 Mpts memory depth (standard); 8 Mpts memory depth (optional) per channel for arbitrary waveforms
- Optional dual-channel with the same performance, equivalent to two independent signal sources
- High frequency stability: ± 1 ppm; low phase noise: -105 dBc/Hz
- Built-in high-order harmonic generator (at most 8-order harmonics)
- Built-in 7 digits/s, 240 MHz bandwidth full featured frequency counter
- Up to 160 built-in arbitrary waveforms, covering the common signals in engineering application, medical electronics, auto electronics, math processing, and other various fields
- Sample rate up to 125 MSa/s, vertical resolution 16 bits
- Arbitrary waveform sequence editing function available; arbitrary waveforms also can be generated through the PC software
- Various analog and digital modulation functions: AM, FM, PM, ASK, FSK, PSK, and PWM.
- Standard waveform combine function, capable of outputting specified waveforms combined with the basic waveforms
- Standard channel tracking function, when enabled, all the parameters of both channels are updated based on users' configurations
- USB Host&Device interface (standard); USB-GPIB function supported
- 4.3" TFT color touch screen
- RS232, PRBS, and Dual-tone outputs supported

Design Features

Unique SiFi II Technology

Generate the arbitrary waveforms points by points without distorting the signals. In comparison with the last generation of the SiFi technology, SiFi II has added multiple filters, supporting the dynamic adjustment of the edge time.



Touch-enabled UI Design

Provide brand new UI operation experience, supporting the tap and drag operation gestures. You can also use the keyboard to complete the the parameter settings.




Advanced Function Output

Support PRBS and RS232 pattern output and local Sequence editing.



100MHz Bandwidth White Gaussian Noise

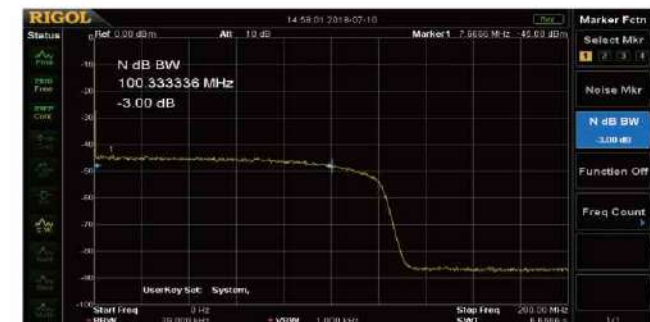

Natural Heat Dissipation Without Fan

0 dB Operating Noise

The brand new heat dissipation structure design has undergone the strict thermal simulation test to ensure the steady operation of the instrument in a complex environment.




DG800 Series Function/Arbitrary Waveform Generator



Dimensions: W×H×D = 237.4 mm × 97 mm × 268 mm Weight: 1.75 kg (Package Excluded)

Function Interface

Dual-channel with the same performance (Optional)

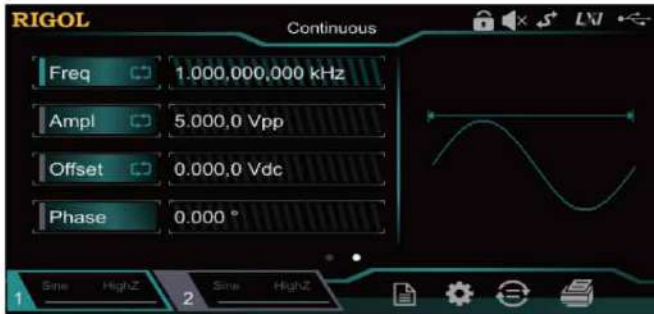

SiFi II Arbitrary waveform function with the unique SiFi II technology

160 built-in arbitrary waveforms



Burst function




Various analog and digital modulation functions



Sweep function



Standard harmonic generator function

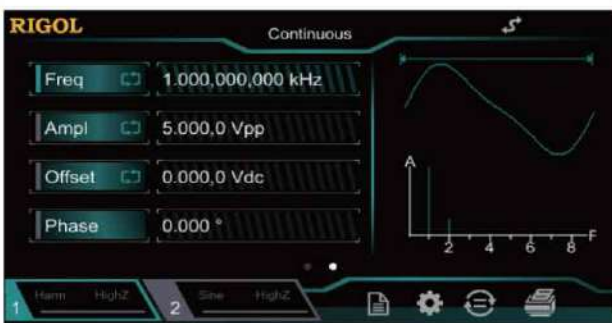

Dualtone function



PRBS function



RS232 function



Sequence function



Waveform combine function




Standard 7 digits/s, 240 MHz bandwidth frequency counter



Channel and system setting



File management function

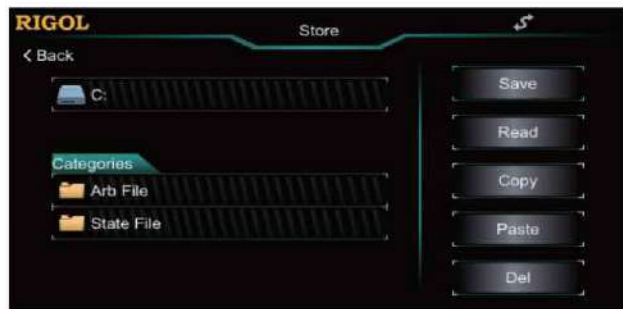

► Specifications

Unless otherwise specified, all the specifications can be guaranteed when the following two conditions are met.

- The signal generator is within the calibration period.
- The signal generator has been running ceaselessly for over 30 minutes under the specified operating temperature (23°C ± 5°C).

All the specifications are guaranteed except the parameters marked with "Typical".

DG800 series specifications

Model	DG812	DG811	DG822	DG821	DG832	DG831
Channel	2	1	2	1	2	1
Max. Frequency	10 MHz		25 MHz		35 MHz	
Sample Rate	125 MSa/s					

Waveform	
Basic Waveforms	Sine, Square, Ramp, Pulse, Noise, DC, Dual-tone
Advanced Waveforms	PRBS, RS232, Sequence
Built-in Arbitrary Waveforms	160 types of waveforms, including Sinc, Exponential Rise, Exponential Fall, ECG, Gauss, HaverSine, Lorentz, etc.

Frequency Characteristics			
Sine	1 μHz to 10 MHz	1 μHz to 25 MHz	1 μHz to 35 MHz
Square	1 μHz to 5 MHz	1 μHz to 10 MHz	1 μHz to 10 MHz
Ramp	1 μHz to 200 kHz	1 μHz to 500 kHz	1 μHz to 1 MHz
Pulse	1 μHz to 5 MHz	1 μHz to 10 MHz	1 μHz to 10 MHz
Harmonic	1 μHz to 5 MHz	1 μHz to 10 MHz	1 μHz to 15 MHz
PRBS	2 kbps to 10 Mbps	2 kbps to 20 Mbps	2 kbps to 30 Mbps
Dual-tone	1 μHz to 10 MHz	1 μHz to 20 MHz	1 μHz to 20 MHz
RS232	baud rate range: 9600, 14400, 19200, 38400, 57600, 115200, 128000, 230400		
Sequence	2 k to 30 MSa/s		
Noise (-3 dB)	100 MHz bandwidth		
Arbitrary Waveform	1 μHz to 5 MHz	1 μHz to 10 MHz	1 μHz to 10 MHz
Resolution	1 μHz		
Accuracy	±(1 ppm of the setting value + 10 pHz), 18°C to 28°C		

Sine Wave Spectrum Purity	
Harmonic Distortion	Typical (0 dBm) ^[1] DC to 10 MHz (included): <-55 dBc 10 MHz to 20 MHz (included): <-50 dBc 20 MHz to 35 MHz (included): <-40 dBc
Total Harmonic Distortion ^[1]	<0.075% (10 Hz to 20 kHz)
Spurious (non-harmonic)	Typical ^[1] ≤10 MHz: <-60 dBc >10 MHz: <-60dBc + 6dB/octave
Phase Noise	Typical (0 dBm, 10 kHz offset) 10 MHz: <-105 dBc/Hz

Signal Characteristics	
Square	
Rise/Fall Time	Typical (1 Vpp, 1 kHz) ≤9 ns
Overshoot	Typical (100 kHz, 1 Vpp) ≤5%
Duty	0.01% to 99.99% (limited by the current frequency setting)
Non-symmetry	1% of the period + 4 ns
Jitter (rms)	Typical (1 Vpp) ≤5 MHz: 2 ppm of the period + 200 ps >5 MHz: 200 ps
Ramp	
Linearity	≤1% of peak output (typical, 1 kHz, 1 VPP, 100% symmetry)
Symmetry	0% to 100%
Pulse	

Pulse	16 ns to 1000 ks (limited by the current frequency setting)
Duty	0.001% to 99.999% (limited by the current frequency setting)
Rising/Falling Edge	≥8ns (limited by the current frequency setting and pulse width setting)
Overshoot	Typical (1 Vpp, 1 kHz) ≤5%
Jitter (rms)	Typical (1 Vpp) ≤5 MHz: 2 ppm of the period + 200 ps >5 MHz: 200 ps
Arbitrary Waveform Sequence	
Waveform Length	2 Mpts(optional 8 Mpts)
Vertical Resolution	16 bits
Sample Rate	Interpolation filter: 10 Sa/s to 30 MSa/s Step filter: 2k Sa/s to 30 MSa/s Smooth filter: 2k Sa/s to 30 MSa/s
Min Rise/Fall Time	Interpolation filter: ≥8 ns Step filter: 3.0/sample rate Smooth filter: 1.0/sample rate
Jitter (rms)	Typical (1 Vpp) Interpolation filter: 200 ps Step filter: <5 ps Smooth filter: <5 ps
Overshoot	Typical (1 Vpp) ≤5%
Harmonic Output	
Harmonic Order	≤8
Harmonic Type	Even Harmonic, Odd Harmonic, Order Harmonic, User
Harmonic Amplitude	The amplitude of each order of the harmonic can be set.
Harmonic Phase	The phase of each order of harmonic can be set.

Output Characteristics	
Amplitude (into 50 Ω)	
Range	≤10 MHz: 1.0 mVpp to 10 Vpp ≤30 MHz: 1.0 mVpp to 5.0 Vpp ≤35 MHz: 1.0 mVpp to 2.5 Vpp
Accuracy	Typical (1 kHz sine, 0 V offset, >10 mVpp, auto) ±(1% of the setting value) ± 5 mV
Flatness	Typical (Sine, 1 Vpp) ≤5 MHz: ±0.1 dB ≤15 MHz: ±0.2 dB ≤25 MHz: ±0.3 dB ≤35MHz: ±0.5 dB
Unit	Vpp, Vrms, dBm
Resolution	0.1 mVpp or 4 digits
Offset (into 50 Ω)	
Range(Peak ac+dc)	±5 Vpk ac+dc
Accuracy	±(1% of the setting value + 5 mV + 1% of the amplitude)
Waveform Output	
Output Impedance	50 Ω (typical)
Protection	Short-circuit protection, automatically disable the waveform output when overload occurs

Modulation Characteristics	
Modulation Type	AM, FM, PM, ASK, FSK, PSK, PWM
AM	
Carrier Waveform	Sine, Square, Ramp, Arb
Source	Internal/External
Modulating Waveform	Sine, Square, Ramp, Noise, Arb
Modulation Depth	0% to 120%
Modulation Frequency	2 mHz to 1 MHz
FM	
Carrier Waveform	Sine, Square, Ramp, Arb

Source	Internal/External
Modulating Waveform	Sine, Square, Ramp, Noise, Arb
Modulation Frequency	2 mHz to 1 MHz
PM	
Carrier Waveform	Sine, Square, Ramp, Arb
Source	Internal/External
Modulating Waveform	Sine, Square, Ramp, Noise, Arb
Phase Deviation	0° to 360°
Modulation Frequency	2 mHz to 1 MHz
ASK	
Carrier Waveform	Sine, Square, Ramp, Arb
Source	Internal/External
Modulating Waveform	Square with 50% duty cycle
Key Frequency	2 mHz to 1 MHz
FSK	
Carrier Waveform	Sine, Square, Ramp, Arb
Source	Internal/External
Modulating Waveform	Square with 50% duty cycle
Key Frequency	2 mHz to 1 MHz
PSK	
Carrier Waveform	Sine, Square, Ramp, Arb
Source	Internal/External
Modulating Waveform	Square with 50% duty cycle
Key Frequency	2 mHz to 1 MHz
PWM	
Carrier Waveform	Pulse
Source	Internal/External
Modulating Waveform	Sine, Square, Ramp, Noise, Arb
Width Deviation	0% to 100% of the pulse width
Modulation Frequency	2 mHz to 1 MHz
External Modulation Input	
Input Range	AM, PM, FM: 75 mVRMS to ± 5 (Vac+dc) ASK, PSK, FSK: standard 5 V TTL
Input Bandwidth	50 kHz
Input Impedance	10 k Ω

Burst Characteristics

Carrier Waveform	Sine, Square, Ramp, Pulse, Noise, Arb, PRBS, RS232, Sequence (except DC, dual-tone, and Harmonic)		
Carrier Frequency	2 mHz to 10 MHz	2 mHz to 25 MHz	2 mHz to 35 MHz
Burst Count	1 to 1,000,000 or Infinite		
Internal Period	1 μ s to 500 s		
Gated Source	External Trigger		
Source	Internal, External, Manual		
Trigger Delay	0 ns to 100 s		

Sweep Characteristics

Carrier Waveform	Sine, Square, Ramp, Arb
Type	Linear, Log, and Step
Orientation	Up/Down
Start/Stop Frequency	Same as the upper/lower limit of the corresponding carrier frequency
Sweep Time	1 ms to 500 s
Hold/Return Time	0 ms to 500 s
Source	Internal, External, Manual
Marker	Falling edge of the sync signal (programmable)

Frequency Counter

Measurement Function	Frequency, Period, Positive/Negative Pulse Width, Duty Cycle
Frequency Resolution	7 digits/s (Gate Time = 1 s)
Frequency Range	1 μ Hz to 240 MHz

Period Measurement	Measurement Range	4 ns to 1,000 ks	
Voltage Range and Sensitivity (non-modulating signal)			
DC Coupling	DC Offset Range	±1.5 Vdc	
	1 µHz to 100 MHz	50 mVRMS to ±2.5 (Vac+dc)	
	100 MHz to 240 MHz	100 mVRMS to ±2.5 (Vac+dc)	
AC Coupling	1 µHz to 100 MHz	50 mVRMS to ±2.5 Vpp	
	100 MHz to 240 MHz	100 mVRMS to ±2.5 Vpp	
Pulse Width and Duty Cycle Measurement			
Frequency and Amplitude Ranges	1 µHz to 25 MHz	50 mVRMS to ±2.5 (Vac+dc)	DC Coupling
Pulse Width	Min. Pulse Width	≥20 ns	
	Pulse Width Resolution	5 ns	
Duty	Measurement Range (display)	0% to 100%	
Input Characteristics			
Input Signal Range	Breakdown Voltage	±7 (Vac+dc)	Input Impedance = 1 MΩ
Input Adjustment	Coupling Mode	AC	DC
	High Frequency Rejection	On: Input Bandwidth = 150 kHz; Off: Input Bandwidth = 240 MHz	
Input Trigger	Trigger Level Range	-2.5 V to +2.5 V	
	Trigger Sensitivity Range	High, Low	
GateTime	1 ms	1.048 ms	
	10 ms	8.389 ms	
	100 ms	134.218 ms	
	1 s	1.074 s	
	10 s	8.590 s	
	>10 s	>8.590 s	
Trigger Characteristics			
Trig Input			
Level	TTL-compatible		
Slope	Rising or falling (selectable)		
Pulse Width	>100 ns		
Latency	Sweep: <100 ns (typical) Burst: <350 ns (typical)		
Trigger Output			
Level	TTL-compatible		
Pulse Width	>60 ns (typical)		
Max. Frequency	1 MHz		
Two-channel Characteristics - Phase Offset			
Range	0° to 360°		
Waveform Phase Resolution	0.03°		
Reference Clock			
External Reference Input			
Lock Range	10 MHz ± 50 Hz		
Level	250 mVpp to 5 Vpp		
Lock Time	<2 s		
Input Impedance(Typical)	1 kΩ, AC coupling		
Internal Reference Output			
Frequency	10 MHz ± 50 Hz		
Level	3.3 Vpp		
Output Impedance(Typical)	50 Ω, AC coupling		
Synchronous Output			
Level	TTL-compatible		
Impedance	50 Ω, nominal value		

Overvoltage Protection

Occurred when:

The instrument amplitude setting is greater than 3.2 V_{pp} or the output AC+DC is greater than $|1.6V_{DC}|$ and the input voltage is greater than $\pm 12 \times (1 \pm 5\%)V$ (<10 kHz). Disruptive discharge voltage: $\pm 5(V_{AC} + DC)$.

The instrument amplitude setting is smaller than or equal to 3.2 V_{pp} or the output AC+DC is smaller than $|1.6V_{DC}|$ and the input voltage is greater than $\pm 2.6 \times (1 \pm 5\%)V$ (<10 kHz). Disruptive discharge voltage: $\pm 18(V_{AC} + DC)$.

Overcurrent Protection

Occurred when: the current is greater than ± 240 mA.

Programming Time

Configuration Changes	USB
Function Change	10 ms
Amplitude Change	5 ms
Frequency Change	5 ms

General Specifications

Power Supply

Power Voltage	100 V to 127 V (45 Hz to 440 Hz) 100 V to 240 V (45 Hz to 65Hz)
---------------	--

Power Consumption	Lower than 30 W
-------------------	-----------------

Display

Type	4.3-inch TFT LCD touch screen
Resolution	480 horizontal × RGB × 272 vertical resolution
Color	16 M

Environment

Temperature Range	Operating: 0°C to 45°C Non-operating: -40°C to 60°C
Cooling Method	Fan cooled
Humidity Range	Below 30°C: ≤95%RH 30°C to 40°C: ≤75%RH 40°C to 50°C: ≤45%RH
Altitude	Operating: below 3,000 meters Non-operating: below 15,000 meters

Mechanical Characteristics

Dimensions (W×H×D)	238 mm × 97 mm × 266.6 mm
Weight	Package excluded: 1.75 kg Package included: 2.85 kg
Interface	USB Host, USB Device, and USB-GPIB
IP Protection	IP2X
Calibration Interval	1 year (recommended)

Certification Information

	Compliant with EN61326-1:2006	
EMC	IEC 61000-3-2:2000	±4.0 kV (Contact Discharge) ±4.0 kV (Air Discharge)
	IEC 61000-4-3:2002	3 V/m (80 MHz to 1 GHz); 3 V/m (1.4 GHz to 2 GHz); 1 V/m (2.0 GHz to 2.7 GHz)
	IEC 61000-4-4:2004	1kV power line
	IEC 61000-4-5:2001	0.5 kV (phase-to-neutral voltage); 0.5 kV (phase-to-earth voltage); 1 kV (neutral-to-earth voltage)
	IEC 61000-4-6:2003	3 V, 0.15 MHz to 80 MHz
	IEC 61000-4-11:2004	Voltage dip: 0% UT during half cycle 0% UT during 1 cycle 70% UT during 25 cycles Short interruption: 0% UT during 1 cycle
Electrical Safety	complies with USA: UL 61010-1:2012, Canada: CAN/CSA-C22.2 No. 61010-1-2012 EN 61010-1:2010,	

Note[1]: 0 dBm output, DC offset 0, impedance 50 Ω.

► Options and Accessories

	Description	Order No
Model	DG812 (10 MHz, Dual-channel)	DG812
	DG822 (25 MHz, Dual-channel)	DG822
	DG832 (35 MHz, Dual-channel)	DG832
	DG811 (10 MHz, Single-channel)	DG811
	DG821 (20 MHz, Single-channel)	DG821
	DG831 (30 MHz, Single-channel)	DG831
Standard Accessories	1 Power Cord conforming to the standard of the destination country	-
	1 BNC Cable (only provided by DG832/DG831/DG822/DG821)	CB-BNC-BNC-MM-100
	1 Quick Guide	-
	1 Product Warranty Card	-
Option	Single-dual CH Upgrade Option (only for DG831/DG821/DG811)	DG800-DCH
	Memory Depth Upgrade Option	DG800-ARB8M
Optional Accessories	40 dB Attenuator	RA5040K
	USB-GPIB Interface Converter	USB-GPIB-L